

INSTALLATION INSTRUCTIONS

Replacing Amusement 50 Inch Projection with 42 Inch LCD Kit Assy.

Work Instruction P/N: 069X3665-100

Model: WGF4279-CSLS37H

TOOL(S) NEEDED: #2 Phillips screwdriver, Wire Cutter, 7/16 nut driver, Electric Drill.

PARTS INCLUDED IN THE KIT:

1. 42 in. LCD (1) **Figure 1.**



Figure 1.

2. Bezel (2) **Figure 2.**

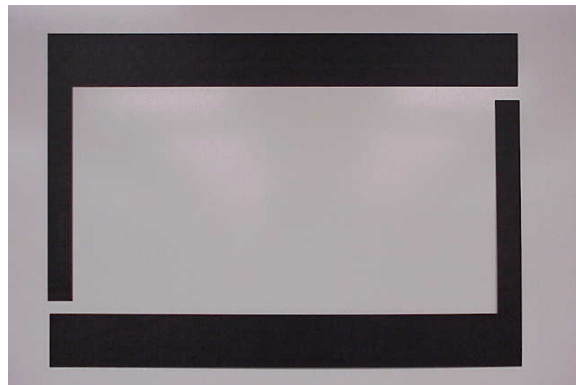


Figure 2.

INSTALLATION INSTRUCTIONS

Replacing Amusement 50 Inch Projection with 42 Inch LCD Kit Assy.

Work Instruction P/N: 069X3665-100

Model: WGF4279-CSLS37H

3. Interface cable.
4. AC cable.
5. LCD Top L & Lower R MTG BRKT (2).
6. LCD Top R & Lower L MTG BRKT (2).
7. Installation MTG Template.
8. Accessories:
 - Cable ties (4)
 - Hex nuts w/washer 1/4-20 x 7/16 (17).
 - Phillips screws 1/4-20 x 1 in. (17)



Figure 3.



To prevent electrical shock or possibly electrocution, disconnect the electrical power source to the game machine before proceeding with the removal of the Projection screen.

INSTALLATION INSTRUCTIONS

Replacing Amusement 50 Inch Projection with 42 Inch LCD Kit Assy.

Work Instruction P/N: 069X3665-100

Model: WGF4279-CSLS37H

INSTALLATION INSTRUCTIONS:

1. Remove existing bezel and Plexiglas from game and place aside for reuse later.
2. Loosen retainer clips that secure projection screen and remove projection screen from game. Leave retainer clips in place for use later.
3. Place MTG. template on side of cabinet holding it in place with tape and drill MTG. holes in locations shown. Using the same MTG. template, place template on opposite side of cabinet and drill MTG. holes in location shown. See **Figure 4**
4. Secure mounting brackets to both sides of cabinet in drilled holes using (8) 1/4-20 Phillips screws and nuts as shown in **Figure 5**.



Figure 4.

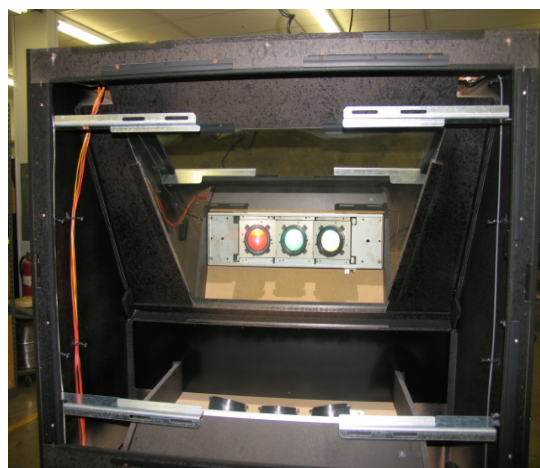


Figure 5.

INSTALLATION INSTRUCTIONS

Replacing Amusement 50 Inch Projection with 42 Inch LCD Kit Assy.

Work Instruction P/N: 069X3665-100

Model: WGF4279-CSLS37H

5. Mount LCD assy to mounting brackets using (8) 1/4-20 phillips screws & nuts as shown in **Figure 6**. Adjust as necessary to center LCD in game.
6. Connect interface and power cable from kit to game and turn on power. Make adjustments as required.
7. Secure (2) L-Shaped bezels to projection guides as shown in **Figure 7**.
8. Remount Plexiglas and bezel to game.



Figure 6.



Figure 7.