5. General Specifications:

Currency and Protocol:

See Software Description Document

Electrical

Specification:

| Voltage | Max. Operating Current | Max. Current |
|---------|---------------------------|--------------|
| 12 V DC | 1.0 A | 2.3 A |

Use only current limiting CSA or UL approved Power Supply.

| Operating Temperature: | -0 to +50 Degrees Celsius |
|---------------------------|--|
| Weight: | 4.2 kg (Without Cassette) |
| Weight of Cassette: | 2.3 kg |
| Features: | Multi-Width Validating Head Bracket for Optional Lock for the Cassette End Switch for the Cassette and Cassette Lock Standard Bezel |
| Items Enclosed: | MFL Bill Validator User Guide Software Description JAE Connector Kit OPT-MKFL-JAE Lock Installation Kit OPT-MKFL-FLH1 |
| Optional: | Sensor Box Extractor OPT-HW-FT01 |

SUZOHAPP

1743 Linneman Road, Mount Prospect, IL 60056 USA PHONE: 1-847-952-5932 or 1-800-239-7017

> bill-to-bill@suzohapp.com http://www.suzohapp.com/Bill-to-Bill

 
> > © 2017 SUZOHAPP


SUZOHAPP

Front Load Bill Validator

MFL-0487

The Part Number on the Label includes Hardware Part Number and Software Part Number.



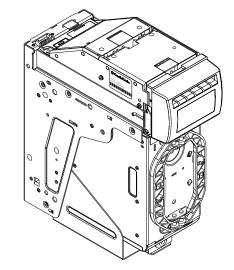

1. Assembly Contents:

| Unit | Part No. | Description |
|-----------------------|------------------------|---|
| Validating Head | MFLV-9013 | With Multi-Width Centering Mechanism |
| Sense -A- Click | FLS-1706U FLS-1706L | Sense-A-Click Sensor Packs |
| Bezel | MFLB-2401 | Standard Bezel |
| Housing | FLH-3510 | 1000, Lock Bracket, Cassette and Lock Switches |
| Power Interface | FLP-2510 | 12 V DC, RS-232 |


2. DIP Switch Setting:

DIP switches may be accessed by removing the Validating Head and opening the transparent cover at the rear. See Software Description for correct denominations and settings.


| SW No.1 | ON State | OFF State | Default |
|---------|--------------------|---------------------|---------|
| SW 1.1 | Bill Type 1 Enable | Bill Type 1 Disable | ON |
| SW 1.2 | Bill Type 2 Enable | Bill Type 2 Disable | ON |
| SW 1.3 | Bill Type 3 Enable | Bill Type 3 Disable | ON |
| SW 1.4 | Bill Type 4 Enable | Bill Type 4 Disable | ON |
| SW 1.5 | Bill Type 5 Enable | Bill Type 5 Disable | ON |
| SW 1.6 | Bill Type 6 Enable | Bill Type 6 Disable | ON |
| SW 1.7 | Bill Type 7 Enable | Bill Type 7 Disable | ON |
| SW 1.8 | Bill Type 8 Enable | Bill Type 8 Disable | ON |

| SW No.2 | ON State | OFF State | Default |
|---------|----------|--------------------|---------|
| SW 2.1 | Four Way | One Way | ON |
| SW 2.2 | Reserved | Reserved | ON |
| SW 2.3 | Reserved | Reserved | ON |
| SW 2.4 | Service | Host Communication | OFF |

 3. Interface Connector Pinout:



Mating Connector: Socket DR-12-2SC-FO (JAE) Contact DR-SC20-1-7000 (JAE)

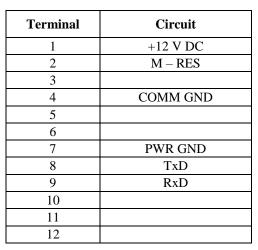

4. Diagnostics:

Chart below lists the validator malfunctions, as indicated by the flashing bezel light:

| No. of Consecutive Flashes | Malfunction |
|----------------------------------|--|
| 1 Red/ Pause | Cassette is out of position |
| 2 Red/ Pause | Wrong Sense-A-Click type or Sense-A-Click failed |
| 3 Red/ Pause | Cassette is full |
| 4 Red/ Pause | Jam in the Cassette (Stacking Motor cannot stack the bill) |
| 5 Red/ Pause | Failure of Capacitance Sensors |
| 6 Red/ Pause | Failure of Optical Sensors |
| 7 Red/ Pause | Failure of Magnetic Sensors |
| 8 Red/ Pause | Transport Motor failure |
| 9 Red/ Pause | Speed of Transport Motor is fast |
| 10 Red/ Pause | Failure of Aligning Motor or Aligning Sensor |
| 11 Red/ Pause | Bill Pathway is not empty (bill is jammed) |
| 12 Red/ Pause | Jam at the entry of the Cashbox and credit is not issued |
| 13 Red/ Pause | Transport Motor overload |
| 1 Green/ Red | COM Port CRC error |
| 2 Green/ Red | Internal CRC error |
| 3 Green/ Red | Improper Memory Stick |
| 4 Green/ Red | Memory Stick is absent |
| 5 Green/ Red | Improper type of Memory Stick |
| 6 Green/ Red | Download error |