

# SUZOHAPP

## Bill-to-Bill Currency Management System Firmware Updates

### Multi Load Memory Sticks.



Partno:   BBM-40CCnnnn-NN  
Label:    BB-CCnnnn-NN  
\*\*CC – Country Code  
\*\*nnnn – Version number  
\*\*NN – no of downloads

### Single Load Memory Sticks



Partno:   BBM-40CCnnnn  
Label:    BB-CCnnnn  
\*\*CC – Country Code  
\*\*nnnn – Version number

#### Procedure:

1. Power down (off) the validator.
2. Remove the old/dummy stick.
3. Install the memory stick.
4. Turn the Dip SW 4 to SERVICE mode
5. Power on the validator (apply power).
6. Wait while the indicator LED flashes green/red.
7. Wait until the validator has finished initialisation.
8. Observe the LED turn green.
9. Power down (off) the validator.
10. Remove the memory stick.
11. Stick new software label on the dummy stick.
12. Install the dummy stick.
13. Turn the Dip SW 4 to COMMUNICATION mode
14. Power on the validator (apply power).

#### Procedure:

1. Power down (off) the validator.
2. Remove the old/dummy stick.
3. Install the memory stick.
4. Turn the Dip SW 4 to SERVICE mode
5. Power on the validator (apply power).
6. Wait while the indicator LED flashes green/red.
7. Wait until the validator has finished initialisation.
8. Observe the LED turn green.
9. Power down (off) the validator.
10. Turn the Dip SW 4 to COMMUNICATION mode
11. Power on the validator (apply power).