

Game King Upright



K902-105 (yellow)

K902-105W (white top)

K902-106 (all white)

1. Open front door of machine
2. Remove connector harness from Denom arrow panel.
3. Remove all the lamps from pcb (twist & pull)
4. Take new replacement LED panel and remove adhesive-back tape.
5. Position LED strip aligning LEDs in existing holes as shown and apply pressure to secure to panel.
6. Plug original harness into new socket
7. Close door to machine and LED panel will light up.



Note: on machines with LCD conversions, you must install the pcb with connector up and use optional K902-106E extension adapter. Direct short circuit will occur if you install with connector down position!!