

Product Information

Wireless Karaoke Microphone

About This Document


This document is intended for Operators of TouchTunes Virtuo SmartJukes running Karaoke events, TouchTunes Field Service, Customer Support, and Sales personnel.

It provides information about the TouchTunes Wireless Karaoke Microphones:

Mic	Color	TouchTunes part #
A	Red	600153-001
B	Blue	600153-002
C	Green	600153-003
D	Gold	600153-004
E	Black	600153-005
F	Silver	600153-006

Ensuring You Received the Correct Microphone

In order to reduce the possibility of interference with other locations (or a second Karaoke installation within a single location), TouchTunes Karaoke has three distinct frequency pairings of microphones and wireless microphone receivers.

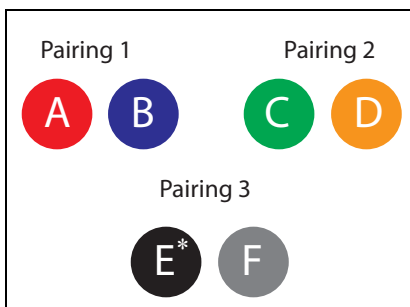

Each wireless receiver is pre-configured to operate with two microphones of a set frequency. The microphones within a pairing are color coded with a ring around the center.

You have received the correct microphone if it is the correct counterpart to the other microphone you already have. For example, if you already had a blue microphone, and you just received a red microphone, then you have the correct pairing. If you had a blue microphone, and you received a green microphone, then the green microphone will not be able to operate with the Wireless Receiver that is installed at that particular location.

If a location has lost both microphones, and you need to find out what pairing its wireless receiver was set for, look on the reverse of the wireless receiver for two colored stickers that will show you the colors of the two microphones that it is set to work with.

* The black ring might be hard to see, due to the microphone being black, so if you do not see a colored ring, you may safely assume that your microphone has a black ring.



Installing the Batteries

To install the batteries into each microphone, simply unscrew the bottom of the microphone, and insert a 9V battery into the opening, being careful to line up the poles of the battery appropriately, and then pushing it in until it snaps into place. Then, screw the bottom of the microphone back on. TouchTunes recommends using Energizer® batteries with these microphones.

Using the Wireless Microphones

Before they can be used, each microphone must be turned on, using the single switch along the side of the microphone. If the battery was installed properly and still has enough power left, the red light near the switch will flash once.



See the full **900587-001 Karaoke Installation and Setup Guide** for more information on setting up the rest of the Karaoke Kit, and organizing Karaoke events.

Contacting TouchTunes Support

If you need help with or have questions about this document, contact TouchTunes by:

- Using the email links on the Contacts page on the TouchTunes Dashboard at <https://operator.touchtunes.com>.
- Calling TouchTunes 24/7 Service Hotline at 847-353-1954.

To help us assist you more effectively with problem reports, the following information may be required when contacting TouchTunes Support:

- SmartJuke ID.
- The serial number of any component you believe to be defective.
- The date/time of the problem.
- Actions performed immediately before the problem occurred.

TouchTunes Interactive Networks, Inc.

400 Sainte Croix Avenue, Suite 200 E
Montreal, Quebec,
Canada, H4N 3L4

TouchTunes Interactive Networks, Inc.

3455 Salt Creek Lane, Suite 100
Arlington Heights, IL 60005
USA

Technical Support

847-353-1954
www.touchtunes.com
