


INSTRUCTIONS FOR USE OF UPSTACKER BILL VALIDATORS

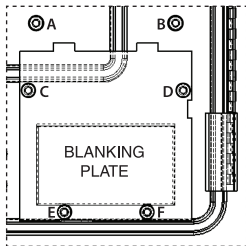

THE RECTANGULAR CUTOUT AT THE BOTTOM OF THE DOOR ACCOMMODATES THE FOLLOWING UPSTACKER BILL VALIDATORS:

<u>MANUFACTURER</u>	<u>MODEL #</u>
MEI	SERIES 2000 UPSTACKERS
ICT	A6, S6, PAT SERIES UPSTACKERS
PYRAMID	APEX 5000-U & XLC 5000-U SERIES UPSTACKERS

MOUNTING UPSTACKER BILL VALIDATOR

1. Remove 2 Bottom hex nuts (E & F) from Bottom (long) studs and remove 2 white spacers (retain both for later use)
2. Remove 2 hex nuts (C & D) from Middle (short) studs
3. Remove the blanking plate from the door
4. Place the 2 white spacers removed in step #1 over the 2 (long) studs at the Bottom of the door (E & F)
5. Remove 2 Top hex nuts (A & B) from Top (long) studs and keep the existing 2 white spacers on these 2 (long) studs (A & B)
6. Place the Upstacker Bill Validator over the 4 studs with spacers on them (A, B, E & F)
7. Place ground wire coming from the bill validator unit on ground stud
8. Secure hex nuts (A, B, E & F) removed in steps #1 & #2