

TFT (VGA+DVI)  
LCD MONITOR SPECIFICATIONS

MT43W-267C3



維亞

Ver.171120

---



# Contents

<b>PRODUCT.....</b>	<b>2</b>
Contents.....	2
Features.....	2
Power saver.....	2
Plug & play.....	2
<b>SAFETY.....</b>	<b>3</b>
Electrical.....	3
Common.....	3
<b>SET UP YOUR LCD MONITOR.....</b>	<b>4</b>
Installation.....	4
Screen Adjustments.....	4
OSD Control.....	5
<b>TROUBLE SHOOTING.....</b>	<b>8</b>
<b>MAINTENANCE.....</b>	<b>9</b>
<b>SPECIFICATIONS.....</b>	<b>10</b>
<b>SUPPORT PC TIMING.....</b>	<b>11</b>
<b>OUTER DIMENSION.....</b>	<b>12</b>

# PRODUCT

Note : Save the original box and packing material for future shipping needs.

## Contents

- ◆ The Accessories in this LCD Monitor Model.  
Accessory Box:
  1. VGA cable X 1
  2. Power Cord X 1
  3. User's manual X 1
  4. DVI Cable(Optional)
  5. Bracket (Optional)

## Features

- ◆ High Brightness.
- ◆ Fast response time.
- ◆ Power Saver.
- ◆ Low electromagnetic wave and power saver.
- ◆ Safety certifications.

## Power saver

- ◆ Power control system, also called (Power Saver), is installed inside the LCD Monitor.
- ◆ If the monitor has not been used for a certain period of time, the system will turn the monitor to low voltage mode to save power. Slight moving or any click will return to the original image.
- ◆ The VGA card inside the computer handles Power Saver. You can use computer software to set the function.
- ◆ The LCD Monitor is compatible with EPA ENERGY STAR and N TEK if used with a VESA DPMS computer.
- ◆ To save power, turn off the power of the LCD monitor when not in use.

## Plug & play

- ◆ The new VESA Plug and Play function is used which eliminates the complicated and time-consuming installation process.
- ◆ You can use the Plug and Play system without encountering usual installation problems. Your computer system can easily identify and automatically adjust the monitor.
- ◆ The LCD Monitor uses Display Data Channel (DDC) to send Extended Display Identification Data (EDID) to the computer system, so the computer system can be set to monitor auto adjust.

# SAFETY

**Note:** Please note the following safety precaution before using this monitor.

Electrical	
<b>Check the Voltage</b>	<ul style="list-style-type: none"> <li>◆ Before connecting the AC power cord to the DC adapter socket, make sure that voltage of the DC adapter is suitable for local power.</li> </ul>
<b>Electrical Shock</b>	<ul style="list-style-type: none"> <li>◆ Do not insert any metal object into opening on the LCD monitor casing to prevent electrical shock.</li> <li>◆ To prevent electrical shock, do not touch the interior of the LCD monitor. Only a qualified technician should open the casing of monitor.</li> <li>◆ If the power cord is damaged, do not use the LCD monitor. Do not place any object on the power cord, and place the power cord away from crowded areas.</li> <li>◆ While pulling the LCD monitor plug away from the socket on the wall, hold the plug not the power cord.</li> <li>◆ Do not expose the LCD monitor in the rain or somewhere closed to the water (such as in the kitchen, near the pool).</li> <li>◆ If the LCD monitor is dampened, please unplug the power cord and contact Service Center.</li> </ul>
<b>Unusual condition</b>	<ul style="list-style-type: none"> <li>◆ If the LCD monitors functions improperly, especially when making unusual noise or spreading strange odor, unplug it immediately and contact service center.</li> </ul>
Common	
<b>Monitor and Screen Care</b>	<ul style="list-style-type: none"> <li>◆ Avoid touching the screen with your fingers or any tough objects. Oil from the skin is difficult to remove, and touching objects to the screen may damage the panel. It is suggested to clean the monitor by first turning it off and using a soft, dry cloth.</li> <li>◆ The LCD monitor should be placed in areas with low humidity and less dust. Please watch out for environmental conditions on humidity and ventilation.</li> <li>◆ The LCD monitor should be kept away from heat sources and irradiation. For example: kitchen, oven or direct sunlight and etc.</li> <li>◆ To reduce glare, avoid placing the monitor in a place that receives direct sunlight.</li> <li>◆ Avoid letting small children play with monitor. The frequent touching of the panel will cause panel to look dirty and will affect the quality of the brightness if too dirty.</li> <li>◆ If moving the monitor, please handle with care when unplugging and moving it.</li> <li>◆ Do not place items over the monitor when placing and adjusting the LCD monitor.</li> <li>◆ If the LCD monitor is not in use for a long time, please unplug it and restore it into the proper package, the original carton &amp; packaging stuffs are preferred.</li> <li>◆ The opening on the LCD Monitor casing is for the purpose of ventilation. To prevent overheating, the openings should not be blocked or covered. Do not place the LCD monitor on a bed, sofa, blanket or other soft surfaces; or else the soft objects will block the openings of the LCD monitors.</li> <li>◆ If you place the LCD Monitor on a bookshelf or other airtight spaces, it's essential to leave a space of 4"(10cm) distance between the Monitor and the hard surface.</li> </ul>
<b>Clean screen</b>	<ul style="list-style-type: none"> <li>◆ Ensure the area around the LCD monitor is clean and free of moisture. Please refer to [Maintenance] chapter for normal maintenance practice.</li> </ul>

# SET UP YOUR LCD MONITOR

## Installation Notes

**Note:** Please read last section " Safety" before you install the LCD Monitor. Please note the instruction below prior to installing your LCD monitor.

### Installation Position

- ◆ Choose a position where the reflection of light is minimal and away from a window for maximizing the quality of the screen image.
- ◆ It is important to keep 30 cm between the LCD monitor to minimize eyestrain.

### Workstation Height

- ◆ Position the LCD monitor slightly above your horizontal vision as you are sitting.

### Angle of Vision Quick Installation

- ◆ Tilt either forward or backward for the most comfortable viewing angle. This LCD monitor supports connection to a computer or workstation. The steps are described as Quick Setup.

- ◆ After installation, please refer to "Auto Adjust" for automatic adjust procedures.

## Screen Adjustments

### Auto Adjust

Though your computer system can identify the new LCD monitor system, the Auto Adjust function can be as to enhance the display. To enter adjust mode, please refer to "OSD Control".

- ◆ Turn the computer and LCD monitor on.
- ◆ Press 'Auto' button to start Auto Adjust.
- ◆ The LCD monitor will start the Auto Adjust process automatically for 10 consecutive seconds, where you will notice the image change as the Auto Adjust is working.

### Self Test Function Check (STFC):

- ◆ Your LCD monitor provides a STFC function, through which you can check whether the LCD monitor functions are working properly.
- ◆ If your LCD monitor is properly connected, but there is no image showing and the indicator light keeps orange, please follow the steps below to start STFC.

Shutdown computer and LCD monitor.  
Unplug the signal connector from the back of computer.  
Turn the LCD monitor on.

If the image connector is disconnected or damaged, the image shown on following figure will also appear during normal operation.




Turn off the LCD monitor and reconnect signal cable, and then turn the computer and LCD monitor on.

- ◆ If the LED of the LCD monitor is an orange color after completing the steps above, please check your VGA card and computer system. Your monitor should be operating properly.


## OSD Control

Thanks to the user-friendly design of OSD (On Screen Display), you can adjust your monitor by the keypads in the front of the monitor.




1	Power Switch	Power On/Off
2	LED	Power Indicator
		Green:Normal
		Red:Power Saving
		Off:Power Off
3	Menu	Show OSD
4	+	Adjustment when OSD is shown
5	-	Adjustment when OSD is shown
6	Auto/Esc	Automatically optimize positions, phase&clock when OSD is not shown,Exit OSD when OSD is shown

## VGA Signal Connector



Pin 1	Analog Red Input
Pin 2	Analog Green Input
Pin 3	Analog Blue Input
Pin 4	Ground
Pin 5	Digital Ground
Pin 6	Analog Red Ground
Pin 7	Analog Green Ground
Pin 8	Analog Blue Ground
Pin 9	NC
Pin 10	Sync Ground
Pin 11	Ground
Pin 12	SDA (DDC Data)
Pin 13	H. Sync or H+V Sync.
Pin 14	V. Sync
Pin 15	SCL (DDC CLK)

## DVI CONNECTOR PIN ASSIGNMENTS (Optional)

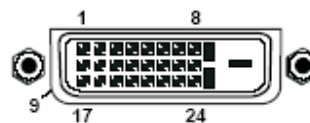


Pin	Signal	Pin	Signal	Pin	Signal
1	TMDS Data 2-	9	TMDS Data1-	17	TMDS Data0-
2	TMDS Data2+	10	TMDS Data1+	18	TMDS Data0+
3	TMDS Data2/4 Shield	11	TMDS Data1/3 Shield	19	TMDS Data0/5 Shield
4	TMDS Data4-	12	TMDS Data3-	20	TMDS Data5-
5	TMDS Data4+	13	TMDS Data3+	21	TMDS Data5+
6	DDC Clock	14	+5V Power	22	TMDS Clock Shield
7	DDC Data	15	Ground(+5V)	23	TMDS Clock+
8	No Connection	16	Hot Plug Detect	24	TMDS Clock-

## Operate Explanation

Your LCD has been adjusted to its optimal status before shipment. You can also adjust the image in accordance with the following illustrations and steps.

- ◆ Press the "Menu" button to start the OSD feature.
- ◆ Click the "+" or "-" button to select the function to be adjusted.
- ◆ Click the "Menu" button to access into the function to be adjusted.
- ◆ Click the "+" or "-" button to change the current setting of the function.
- ◆ To exit the OSD menu or go back to the previous action by clicking the "ESC" button. It will save the change automatically.
- ◆ To repeat above steps for changing the setting of other functions.

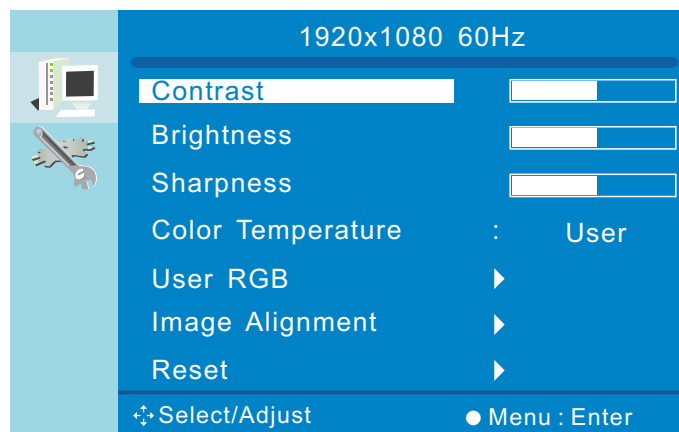

## Notes

- ◆ The OSD disappears several seconds after you stop pressing the buttons while performing an adjustment.
- ◆ Any changes are automatically saved in the memory when the OSD disappears. Turning off the power should be avoided while using the menu.
- ◆ Adjustments for clock, phase and positions are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.
- ◆ The color will change from white to pink while the function is selected.



**Adjustment of  
Screen**

**Function Definition**

Mode	Description	
	Image Setting	Contrast
	Brightness	Adjust the brightness of the screen.
	Sharpness	Adjust the picture sharpness.
	Color temperature	User/6500/7500/9300.
	User RGB	Adjust red/green/blue gain.
	Image Alighthent	Adjust picture position.(V-size,H-size,..)
	Reset	Restore to factory settings.
Feature Controls	Auto Color	Auto adjust the screen color.
	Screen Test	Screen Test.
	Language	Adjust the language.
	Input Source	Adjust the input source.
	OSD Timer	Adjust the OSD timer.

# TROUBLE SHOOTING

Check the information in this section to see if the problems can be solved before requesting repair.

**Note : The consumers are only allowed to solve the problems described as below. Any unauthorized product modification, or failure to follow instructions supplied with the product will end the warranty immediately.**

<p><b>No image</b></p>	<ul style="list-style-type: none"> <li>◆ Make sure power button is ON.</li> <li>◆ Check whether the LCD monitor and computer power cords are plugged and whether there is a supply of power.</li> </ul>
<p><b>No Signal Input</b></p>	<ul style="list-style-type: none"> <li>◆ Check the signal connection between the computer and LCD monitor.</li> </ul>
<p><b>"Out Of Range"</b></p>	<ul style="list-style-type: none"> <li>◆ Check the computer image output resolution and frequency and compare the value with the preset values (Please refer to [Appendix-Display Mode]).</li> </ul>
<p><b>Fuzzy image</b></p>	<ul style="list-style-type: none"> <li>◆ Adjust Phase.</li> </ul>
<p><b>Image too bright Image too dark</b></p>	<ul style="list-style-type: none"> <li>◆ Adjust brightness and contrast by OSD.</li> </ul>
<p><b>Irregular image</b></p>	<ul style="list-style-type: none"> <li>◆ Check the signal connection between the computer and LCD monitor.</li> <li>◆ Perform Auto Adjust.</li> </ul>
<p><b>Distorted image</b></p>	<ul style="list-style-type: none"> <li>◆ Reset the LCD monitor. (perform the "Recall" function by OSD)</li> <li>◆ Take off extra accessories (such as signal extension cord).</li> </ul>
<p><b>Image is not centered Size is not appropriate</b></p>	<ul style="list-style-type: none"> <li>◆ Use OSD Image Menu to adjust H. Position and V. Position.</li> <li>◆ Check image size setting.</li> <li>◆ Perform Auto Adjust.</li> </ul>
<p><b>Uneven color Color too dark Dark area distorted White color is not white</b></p>	<ul style="list-style-type: none"> <li>◆ Use OSD Color Menu to adjust color setting.</li> </ul>
<p><b>Can't adjust LCD monitor with the buttons in the front. The other problem</b></p>	<ul style="list-style-type: none"> <li>◆ Please contact the stores where you purchased the unit or service center listed at your warranty card.</li> </ul>

# MAINTENANCE

	<p>This product is under strict quality control in the production process. Maintaining the LCD monitor, refer to the description as below, and is important for maximizing the display performance and product life.</p> <p><b>Warning: To prevent electrical shock, do not open the LCD monitor casing. Users shall not repair the LCD monitor on their own. Users' maintenance is limited to cleaning of the parts below.</b></p>
<b>Unplug the power</b>	<ul style="list-style-type: none"> <li>◆ Unplug the LCD monitor from an AC socket before conducting maintenance.</li> </ul>
<b>Check the cover</b>	<ul style="list-style-type: none"> <li>◆ Check to see if the LCD Monitor and accessories are damaged, broken, or strained.</li> </ul>
<b>Clean</b>	<ul style="list-style-type: none"> <li>◆ Never spray or pour any liquid directly onto the screen or case.</li> <li>◆ Avoid water or and liquid permeating into the LCD monitor or accessories.</li> </ul>
<p style="text-align: right;"><b>Cleaner</b></p>	<p>Pure water or non-ammonia, non-alcohol based glass cleaner. Do not use ketene (such as acetone), ethanol, toluene, acetic acid, methane, chloride, or abrasive detergent to clean the monitor because those chemicals can damage the LCD monitor.</p>
<p style="text-align: right;"><b>Screen</b></p>	<p>To clean your LCD monitor screen, use water or mild cleaner, as above, to gently moist a soft, clean cloth. If possible, use a special screen cleaner sheet or a solution suitable for static electricity application.</p>
<p style="text-align: right;"><b>Case</b></p> <p><b>Accessory</b></p>	<p>To clean your LCD monitor case, use water or mild cleaner, as above, to gently moist a soft, clean cloth. To clean your accessories, use water or mild cleaner, as above, to gently moist a soft, clean cloth.</p>
<b>Conserve</b>	<ul style="list-style-type: none"> <li>◆ If the LCD monitor is not in use for a long time, please unplug and save in original box in order to avoid any unexpected damage.</li> </ul>
<b>Disclaimer</b>	<ul style="list-style-type: none"> <li>◆ Any damage resulting from use of any cleaner that is not mentioned above is not covered under this warranty term.</li> </ul>

# SPECIFICATIONS

## \* FEATURES:

- \* High Brightness.
- \* External OSD key board.
- \* Fast response time.
- \* Low electromagnetic wave and power saver.
- \* RoHS compliance.

## SPECIFICATIONS:


<b>Model</b>		<b>MT43W-267C3</b>
<b>ModelSelectionGuide</b>		<b>VGA+DVI</b>
<b>LCD Panel</b>	<b>Screen Size</b>	<b>42.5</b>
	<b>Pixel Pitch(mm)</b>	<b>0.49*0.49</b>
	<b>Backlight</b>	<b>LED</b>
	<b>Response</b>	<b>8ms</b>
	<b>Aspect Ratio</b>	<b>16:9</b>
<b>Viewing Angle</b>	<b>Horizontal</b>	<b>178°</b>
	<b>Vertical</b>	<b>178°</b>
<b>Video</b>	<b>Input Mode</b>	<b>Full HD</b>
	<b>Horizontal</b>	<b>60~73KHz</b>
	<b>Vertical</b>	<b>47~63Hz</b>
<b>Display</b>	<b>Resolution</b>	<b>1920*1080</b>
	<b>Contrast Ratio</b>	<b>3000:1Typ</b>
	<b>Brightness</b>	<b>Min 320 cd/m2</b>
		<b>Typ 400 cd/m2</b>
	<b>Horizontal Size</b>	<b>940.9</b>
	<b>Vertical Size</b>	<b>529.25</b>
	<b>Colors</b>	<b>16.7M</b>
<b>Bandwidth</b>	<b>74.25MHz Typ.</b>	
<b>Power</b>	<b>Consumption</b>	<b>60W Typ. ± 20%</b>
	<b>Management</b>	<b>VESA-DPMS</b>
		<b>60W Typ. ± 20%</b>
		<b>PowerDown</b>
		<b>Mode&lt;/=9Watts</b>
<b>Input</b>	<b>AC Power(Input 100-240VAC)</b>	
<b>Operations</b>	<b>Function Key</b>	<b>5Key</b>
	<b>OSD Adjustment</b>	<b>Constrast,Brightness,Phase,Clock,H-position,V-position,....Exit</b>
<b>Input Signal</b>		<b>0.7Vpp Analog75 ohm</b>
<b>Sync</b>		<b>TTL Level Separate,Composite</b>
<b>Windows Compatibility</b>		<b>Windows98/2000</b>
<b>PC Interface</b>		<b>Analog Interface</b>
<b>Signal Cable</b>		<b>Standard VGA cable w/15-pin D-sub</b>
<b>EMI/Safety</b>		
<b>Operating Temperature</b>		<b>0°C~50°C</b>
<b>Humidity</b>		<b>10~85%</b>
<b>Outer Dimension(L*W*H)mm</b>		<b>962.2x622.8x94.8</b>

**Support  
PC Timing**

<b>Item</b>	<b>Resolution</b>	<b>H Freq.(kHz)</b>	<b>V Freq.(Hz)</b>	<b>Note</b>
1	640x480@60	31.469	59.940	VGA
2	800x600@56	35.156	56.250	SVGA
3	800x600@60	37.879	60.317	SVGA
4	1024x768@60	48.363	60.004	XGA
5	1280x720@60	44.770	59.860	720p-60
6	1280x768@60	47.600	60.030	WXGA
7	1360x768@60	47.539	59.573	LCD
8	1920x1080@60	67.158	59.96	Full HD

# OUTER DIMENSION

DCC4R029

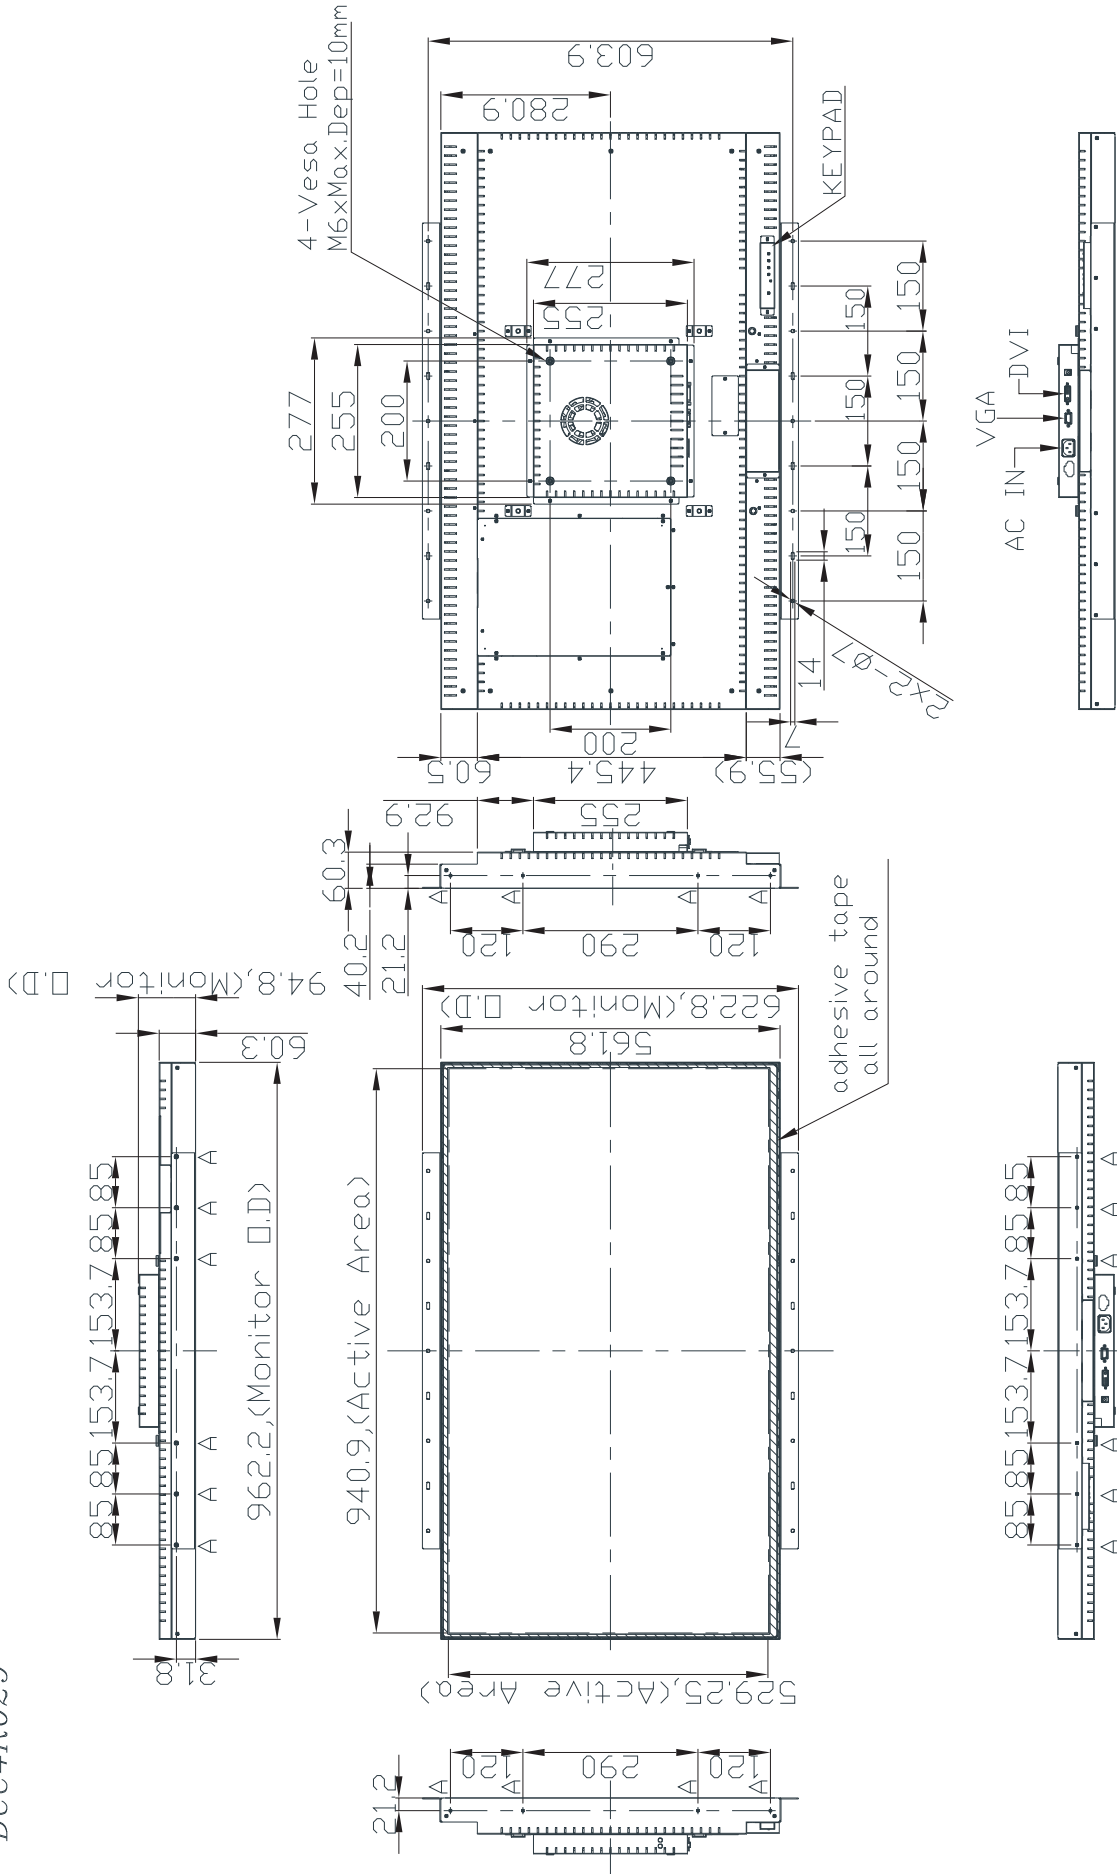

MARK	REV.	DESCRIPTION	AUTHOR	DATE
<p>Note:</p> <p>A: User Hole x 20pcs  M4, PITCH=0.7/MACHINE  MAX. TORQUE=14.3~16.3kgf-cm  MAX. DEPTH=6.0mm</p>				
<p>標電電子股份有限公司  SHANDE ELECTRONICS CO., LTD.  STANDARD TOLERANCE / LIMITS  UNLESS OTHERWISE SPECIFIED  RANGE TOLERANCE  &gt;6~300 ±0.2  &gt;300~600 ±0.3  &gt;600~1200 ±0.5  ANGLES ±1°  平面度 ±0.3</p>				
Drawer		Checked Approval	MATERIAL	FINISH
楊慶銘				
DRAW NO. D-J-MT43W-267C3-01A				DATE
				2016.02.26
Model MT43W-267C3				SCALE
				1:12
				UNIT
				m/m





維亞